

2465 Piston Gauge

Change Float Piston Indicator vacuum feed-through fitting to new potted style

1. Remove old vacuum fitting and wires on the bottom of piston gauge.



Remove old fitting
and wires



2. Install new style feed-through fitting on bottom of piston gauge with some Teflon tape. If you don't have a rotation sensor you will only use 2 wires of the 7 (cut the other 5 off). Splice the 2 wires to the FPI sensor. New style fitting is part number 3899165 (23-842),FEEDTHRU VAC-7COND 1/2NPTM SS



3. Connect other ends of two wires to BNC connector part number 1930477 on piston gauge base. 1930477 (3778),BNC (F) ISOLATED GND

Connect other end of wires to BNC connector

